



COREtec® Moldings

COREtec moldings are vinyl wrapped and feature a waterproof plastic core. Moldings* are available in Quarter Round, T-Mold, Reducer, BabyThreshold, Stair Cap and Flush Stair Nose. T-Mold and Reducer easily snap into the included plastic strip.

Quarter Round




T-Molding




Reducer




BabyThreshold

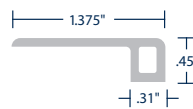

Stair Cap

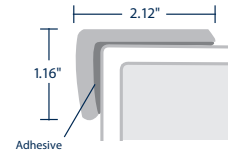

Flush Stair Nose

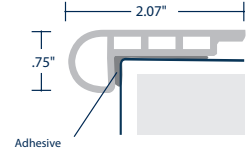

Quarter Round Installation Instructions

1. Measure & trim to fit.
2. Affix molding using adhesive, screws or nails.
3. Follow adhesive manufacturer's instructions completely.

T-Mold Installation Instructions

1. Measure & trim to fit.
2. Affix track to floor using adhesive, screws, or nails.
3. Insert molding into track. Tap down with rubber mallet.

Reducer Installation Instructions

1. Measure & trim to fit.
2. Affix track to floor using adhesive, screws, or nails.
3. Insert molding into track. Tap down with rubber mallet.

BabyThreshold Installation Instructions

1. Measure & trim to fit.
2. Affix molding using adhesive.
3. Follow adhesive manufacturer's instructions completely.

Stair Cap Installation Instructions

1. Measure & trim to fit.
2. Affix molding to stair edge using adhesive.
3. Follow adhesive manufacturer's instructions completely.

Flush Stair Nose Installation Instructions

1. Measure & trim to fit.
2. Affix molding to stair edge using adhesive.
3. Follow adhesive manufacturer's instructions completely.